



- 4 -

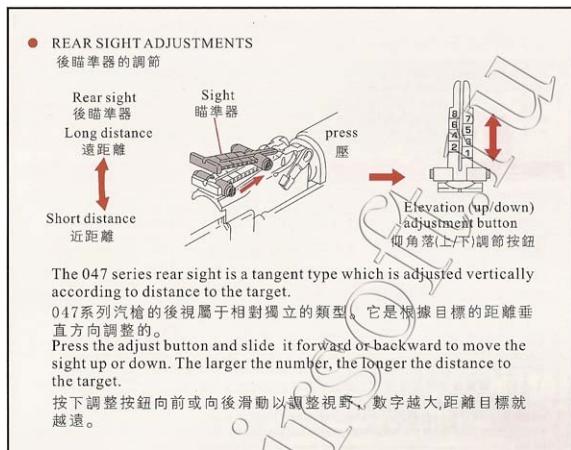

- 5 -



- 6 -

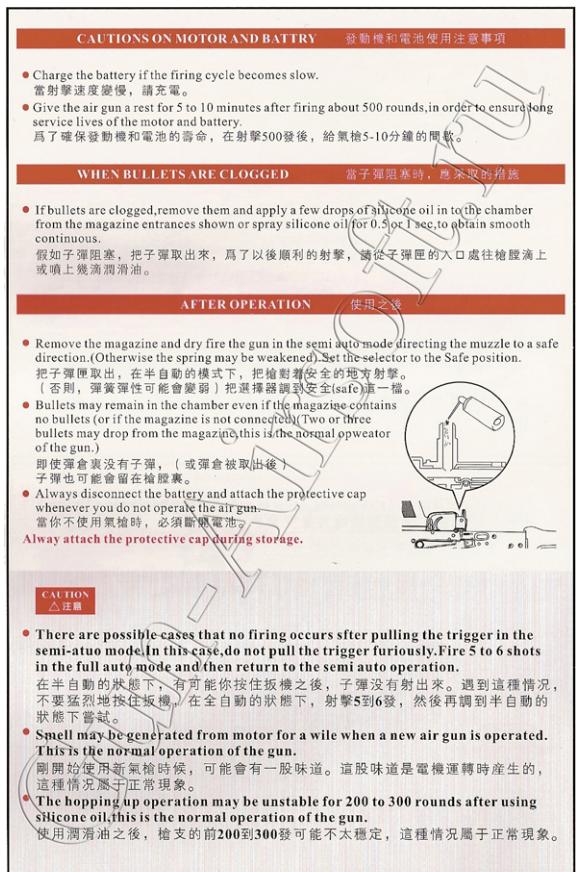

- 7 -

## 8 TROUBLE CLINIC(TROUBLE SHOOTING)

故障診斷 (維修之前請確認是否發生故障)

SYMPTOM 痘狀	CAUSE 原因	ACTION 方法
No operation at all 無法操作	Select or is set to safety. 選擇(器)杆調在安全這一檔 (Safety)	Set the selector lever to Semi or Full Auto 把選擇(器)杆調在半自動或全自動檔
	Battery is not charged. 電池沒有充電	Charge the battery 給電池充電
	Battery connector is disconnected. 電池連接器被斷開	Connect the connector 連接連接器
	The + and - or battery connector is reversed. 電池的正負極連接器倒置	Connect the connector correctly (check the fuse). 正確連接連接器 (檢查保險管)
	Fuse is blown out 保險管爆裂	Replace the fuse (See page 12). 重新換上保險管 (見第12頁)
	Expired motor life (50,000 to 60,000 rounds) or poor electrical connection. 換新的電機 (可向經銷商或我們購買), 或者仔細檢查和修理電線連接端子	Replace the motor (purchasing from your dealer or us) and repair the contacts 換新的電機 (可向經銷商或我們購買), 或者仔細檢查和修理電線連接端子
Although motor is removing,bullets jump out. 電機沒有發生故障，但子彈無法正常發射。	Bullets are clogged in the magazine. 子彈阻塞在彈匣裏	Insert the charging rod into the magazine and move up and down a few times to remove clogged bullets 用裝載杆插進彈匣裏，上下移動幾次，把阻塞的子彈移出
	Bullets are clogged in the chamber. 子彈阻塞在(槍)膛裏	Remove clogged bullets using the cleaning rod 用(槍支的)清潔器把阻塞的子彈取出
	Faulty gear 齒輪壞了	Purchase the replacement gear from your dealer and repair 向經銷商購買新的齒輪後進行維修
Impossible full-auto operation.(Automatic firing) 不能連續(子彈無法射出)	Insufficient battery power 電池電量不足	Charge the battery 給電池充電
	Faulty bullet feed of magazine 彈匣裏的子彈裝錯	Repair clogging the magazine 清理彈匣裏的堵塞物
Impossible semi-auto operation.(Single shot) 不能單發	Poor electrical connection 電線連接不好	Consult your dealer or us for overhaul maintenance or repair 向經銷商諮詢如何維修
	Deviation in gear timing 齒輪調配偏離	Set to semi auto firing 5 to 6 rounds in full auto 在全自動一檔射擊5到6次後調到半自動檔

- 8 -

Use of poor quality BB bullets will cause problems. Never disassemble or modify the gun if using low quality BB bullets. Never disassemble or modify the gun if using low quality BB bullets.

SYMPTOM 痘狀	CAUSE 原因	ACTION 方法	
Impossible semi-auto operation.(Single out) 不能半自動操作	Insufficient battery power. 電池電量不足	Charge the battery 給電池充電	
Automatic firing become shorter. 運動射擊變慢	Insufficient battery power. 電池電量不足	Charge the battery 給電池充電	
Shooting distance become shorter 子彈射程變短	Worn or damaged chamber packing (槍)膛材料太舊或壞了	Consult your dealer or us for overhaul maintenance or repair. Replace the chamber packing. Piston packing (O-ring) 活塞材料 (O形圈) 太舊或壞了 向經銷商諮詢如何維修。重新換上槍膛材料，活塞材料 (O形圈) 和活塞組裝件。	
	Worn or damaged chamber packing (O-ring) 槍膛材料 (O形圈) 太舊或壞了	向經銷商諮詢如何維修。重新換上槍膛材料，活塞材料 (O形圈) 和活塞組裝件。	
	Deteriorated piston spring 活塞彈簧損壞	Use the genuine BB bullet 使用質量合格的BB彈	
Faulty gear. 齒輪壞了	Faulty BB bullets. (Too small or heavy) BB子彈不合格 (太小或太重)	Purchase the replacement gear from your dealer and repair 向經銷商購買新的齒輪後進行維修	
	Gear problem caused by too many blank firing or worn or damaged gear. 太多的空白發射導致齒輪出現問題或者齒輪輪廓被磨損	Consult your dealer or us for overhaul maintenance, part replacement(gear etc) or repaire 向經銷商諮詢如何維修，零件替換 (齒輪等)	
	Faulty problem caused by too many blank firing or worn or damaged gear. 太多的空白發射導致齒輪出現問題或者齒輪輪廓被磨損	Consult your dealer or us for overhaul maintenance, part replacement(gear etc) or repaire 向經銷商諮詢如何維修，零件替換 (齒輪等)	
Too loud operating noise 噪音太大	Worn or damaged chamber packing (槍)膛材料太舊或壞了	No hop setting 沒有設置HOP	Turn the hop adjustment lever toward HOP 把調節杆調到HOP位置
	Faulty BB bullets. (Too small) BB子彈不合格 (太小)	Use the genuine BB bullet 使用質量合格的BB彈	
Bullets being fallen out from barrel end. 子彈從槍管頭彈出	No hop setting 沒有設置HOP	Stop operation immediately, disconnect the battery, wipe off water from water from inside the main body and the battery, and after complete dry, carry out trial firing. If no operation or malfunction is detected, consult your dealer or us for repair. 立刻停止使用，斷開電池，把電池和槍支內部的主要部分擦幹，等槍支完全幹了之後，再嘗試射擊。假如無法使用或者發現故障，向經銷商或我們諮詢如何維修。	
	Faulty BB bullets. (Too small) BB子彈不合格 (太小)	Stop operation immediately, disconnect the battery, wipe off water from water from inside the main body and the battery, and after complete dry, carry out trial firing. If no operation or malfunction is detected, consult your dealer or us for repair. 立刻停止使用，斷開電池，把電池和槍支內部的主要部分擦幹，等槍支完全幹了之後，再嘗試射擊。假如無法使用或者發現故障，向經銷商或我們諮詢如何維修。	
Being wet or drop into water(rain) 溼水弄濕或掉進水裏 (雨淋)			

- 9 -

 
## 9 VARIABLE HOP UP SYSTEM 可變化的Hop Up系統

By producing a back-spin to the BB bullets, this system allows for straighter and longer distance shooting than normal air gun. Unlike the fixed type, the variable hop up system permits one-touch adjustments using the dial and lever, making it an ideal hop up system.

通過使子彈迴轉，可以使射擊比一般的氣槍射得更直和更遠。不像其他的固定類型的劍齒一樣，可變化的Hop Up系統可以很方便地調整和調節杆來進行調整。

► Adjustment Procedure (Adjust by carry out trial firing)

調節程序 (通過試射擊來進行調節)



● Turning excessively adversely affects the trajectory. So stop turning the hop adjustment lever when bullets fly horizontally. 向相反的方向用力扭轉可能會影響到彈軌。因此，如果子彈能夠水平射出，就停止扭轉調節杆。

● The best position is where the bullets fly horizontally, and the longest flying distance is obtained. 最佳的位置是子彈水平方向射出，此位置使子彈達到最遠射程。

Too much hop-up (return the lever towards NORMAL) 過度上旋 (將調節杆扳回正常位置)

Best position 最佳位置

Not enough hop-up (return the lever towards NORMAL) 上旋不到位 (將調節杆扳回正常位置)

OPERATIONAL CAUTION (strictly observe the following caution) 操作注意事項 (要注意以下的事項)

● Moving the lever too much towards HOP causes bullets to clog. Firing the gun with clogged bullets damages the piston and gears. 調節杆過度調向跳躍方向會導致子彈堵塞，子彈堵塞的情況下射擊會導致活塞和齒輪的損壞。

● If bullet clogging occurs, immediately stop firing the gun, return the hop lever to the Normal position and remove clogged bullets using the cleaning rod.

如果子彈堵塞，請立即停止，把跳躍杆調至正常位置，用清潔器取出堵塞子彈。

● Make sure to return the hop adjustment lever to the Normal position when removing clogged bullets or cleaning. (Otherwise, the chamber packing is damaged.) 在取出堵塞子彈時或進行清潔時，要把HOP調節杆調回正常的位子 (Normal) (否則可能會損害槍膛)

● Never use used or dirty bullets. (Otherwise, the chamber becomes dirty, resulting in unstable hopping up.) 不要重複使用子彈或使用臟子彈。(否則槍膛會變臟，從而導致跳躍的不穩定)

● When about 10000 rounds are fired, spray silicone oil into the chamber for 0.5 to 1 dec. (See 11 on page 8. The hopping up operation may be unstable for 200 to 300 rounds after spraying the silicone oil.) this is the normal operation of the gun. 射擊大約40000粒子彈，用硅油噴彈膛0.5-1秒。(在噴硅油後，200-300輪射擊的跳躍操作會不穩定，這種情況屬於正常現象。)

● We will not be held responsible for any damage or accidents arising from wrongful operation, disassembly and modification of the gun. Any costs for repair of such damage shall be paid by the user. 由於錯誤操作，重組裝或改變槍栓所引起的損壞或意外，我們一律不負責，由此產生的維修費用由用戶自行承擔。

### CAUTION

If the hop-up is adjusted excessively causing clogging of bullets, immediately stop operating the gun. Return the lever to Normal, fire 2 or 3 shots and readjust. 假如hop-up過分地調整可能會導致子彈的阻塞，遇到這種情況，立刻停止使用，把調節杆調至正常射擊(Normal)狀態下，發射2到3發，然後重新調整。

Since a precision tight barrel is used, use of dirty bullets or those with burrs causes clogging of bullets and possible fatal damage to the mechanical box and system. 由於槍管非常精密，如果使用臟的子彈可能會導致子彈阻塞和很致命的損壞槍栓。

### WARNING


Never hold the gun side ways so the BB bullets will curve tightly. This is due to the HOP-UP system. 不要從側面握住槍支進行射擊，因為BB子彈射出時可能會偏左或者偏右。

### WHEN HOPPING UP IS IMPROPER 跳躍不正常現象


SYMPTOM 痘狀	CAUSE 原因	ACTION 方法
Bullets flying upwards. 子彈向上飛	Too much hop setting (hop) 設置太高	Gradually return adjustment lever towards Normal. 把調節杆逐漸地調到正常狀態。
Short flying distance of bullets (less hopping up effect). 子彈射程太短 (短于跳躍應有效果)	Too much hop setting (hop) 設置太高	Gradually return adjustment lever towards Normal. 把調節杆逐漸地調到正常狀態。
Hop packing contaminated by oil or dirt. Hop包裝被油污或污垢玷污	Hop packing contaminated by oil or dirt. Hop包裝被油污或污垢玷污	Fire bullets equivalent to 4 or 5 magazines or clean the chamber using cleaning rod. 用(槍支的)清潔器清潔槍膛。
Worn or damaged hop packing. Hop包裝太舊或被損壞	Worn or damaged hop packing. Hop包裝太舊或被損壞	Purchase the replacement part at your dealer or from Marui and replace it. 向經銷商或我們購買所需配件，更換hop裝置。
Cannot adjust. 不能調節	Damaged adjustment lever or other parts. 調節杆或其他部件損壞	Purchase the replacement part at your dealer and replace it. 向經銷商購買所需配件，更換hop裝置。
Too much hop setting (hop) 設置太高	Too much hop setting (hop) 設置太高	Gradually return adjustment lever towards Normal. 把調節杆逐漸地調到正常狀態。
Frequent bullets clogging. 子彈經常阻塞	Improper or too large sized BB bullets. BB彈不適合或太大了	Use the BB bullets for Electric Gun. 使用標準BB彈。
Dirty hop packing. Hop包裝弄臟	Dirty hop packing. Hop包裝弄臟	Clean using the cleaning rod or consult your dealer for repair. 用(槍支的)清潔器清潔或者向經銷商諮詢維修。

-10-


-11-

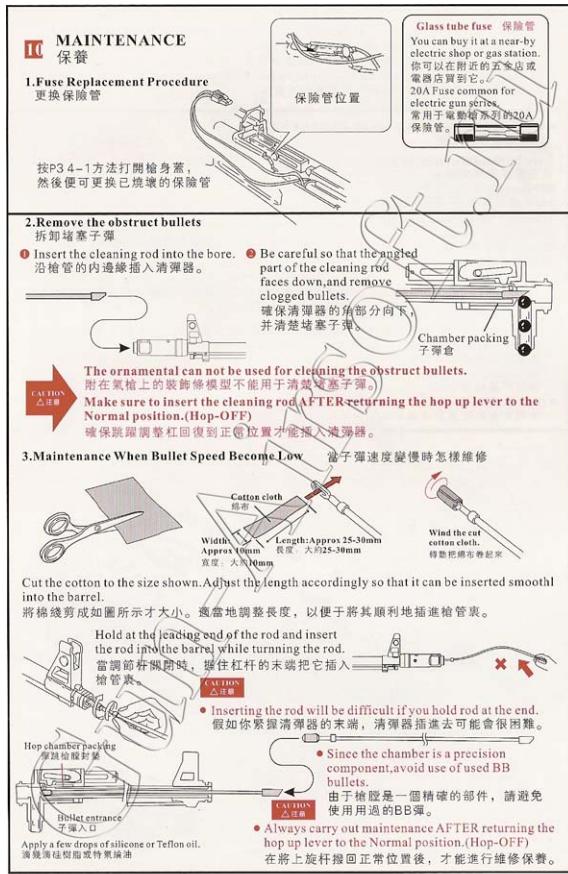

-12-

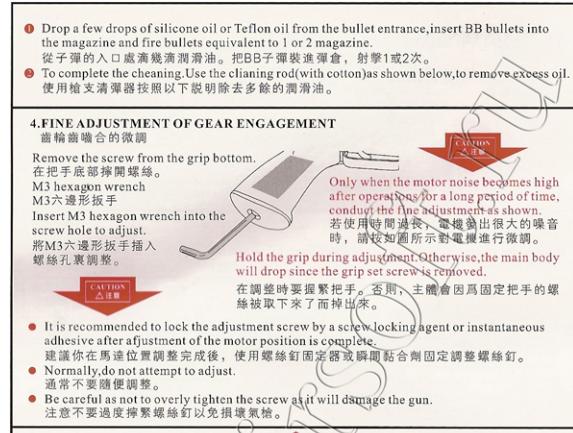

-13-

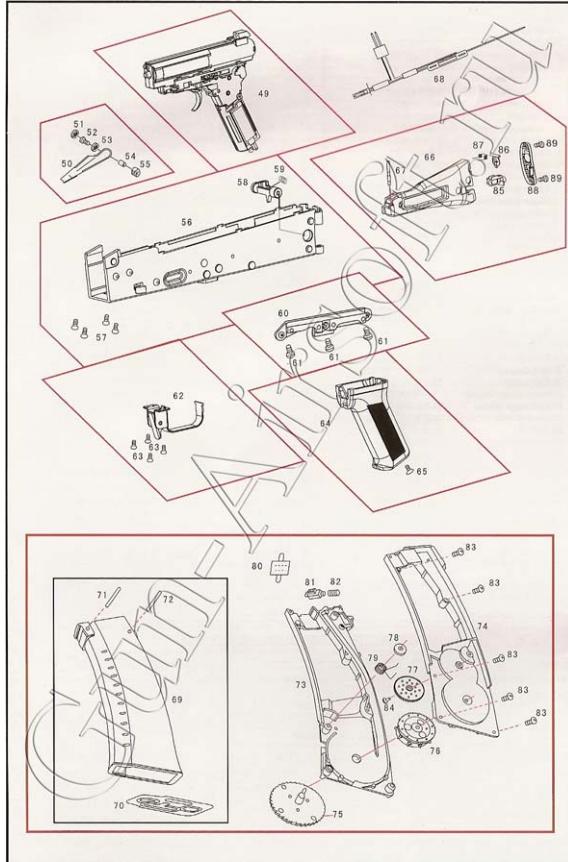

-14-

Name	名稱	CM-047C	CM-047D
Overall length	全長	710mm/955mm (when stock is extended)	605mm/850mm (when stock is extended)
Weight	重量	3540g Including battery 3540克 包含電池	3450g Including battery 3450克 包含電池
Magazine capacity	裝彈數	500 rounds 500發	500 rounds 500發
Bullet	子彈	6mmBB bullets 6mmBB彈	6mmBB bullets 6mmBB彈
Initial bullet speed	初速度	102m/sec (0.2g bullet) 102米/秒 (0.2g BB彈)	102m/sec (0.2g bullet) 102米/秒 (0.2g BB彈)
Full auto shooting speed	連射速度	700 to 800 rounds/min 700~800發/分	700 to 800 rounds/min 700~800發/分

-15-

www.Gun-Airsoft.ru