


1. Gun body	1. 主體	47. M2×4 KMHO	47. M2×4 KMHO
2. Side rail	2. 側軌	48. M2×4 PWMHO D=5.5	48. M2×4 PWMHO D=5.5
3. Rigger loop	3. 扳機圈	49. Nail	49. 管正膠釘
4. Magazine safety	4. 彈盒保險	50. M3×8 PMHO	50. M3×8 PMHO
5. Gun body connector	5. 槍身連接件	51. Ø7×30 Shaft	51. Ø7×30 鑽軸
6. Gun stock connector	6. 槍托連接件	52. M4×4 Screw	52. M4×4 螺絲
7. Gear box	7. 齒箱	53. Down gun guard	53. 下護木
8. Protect a box of line	8. 保護電線	53M.048M Down gun guard	53M.048M 下護木
9. Located slice	9. 定位卡紙	54. Down gun guard slice	54. 下護木切片
10. Semi/auto copper	10. 單連發銅套	55. Up gun guard	55. 上護木
11. Semi/auto selector	11. 單連發撥片	55M.048M Up gun guard	55M.048M 上護木
12. Spring of semi/auto selector	12. 單連發撥片彈簧	56. Lead windpipe	56. 導氣管
13. Gun grip	13. 手把	57. Up gun guard back cap	57. 上護木後蓋
14. M4×5 TMHO	14. M4×5 TMHO	58. Down gun guard slice	58. 下護木切片
15. Out gun barrel	15. 槍外管	59. Cocking lever	59. 拉手
15M.048M Out gun barrel	15M.048M 槍外管	60. Spring	60. 拉手回位簧
16. Rear gun sight base	16. 後準星座	61. Localized copper	61. 限位銅套
17. Up gun guard located nail	17. 上護木限位釘	62. Lever cock	62. 拉手撥絲
18. Staff gauge panel	18. 標尺鋼片	63. Gun body cover	63. 槍身按鍵
19. Staff gauge	19. 標尺	64. M3×3 Screw	64. M3×3 螺絲
20. Staff gauge release spring	20. 標尺按鍵彈簧座	65. Gun body cover	65. 槍身蓋
21. Staff gauge release spring	21. 標尺按鍵彈簧	66. Gunstock	66. 槍托
22. Staff gauge release	22. 標尺按鍵	66M.048M Gunstock	66M.048M 槍托
23. Ø4×24 Shaft	23. Ø4×24 鑽軸	67. Rear gallus ring	67. 後背帶環
24. Down gun guard front cap	24. 下護木前蓋	67M.048M Rear gallus ring	67M.048M 後背帶環
25. Down gun guard front cap button	25. 下護木前蓋扣	68. M4×8 KMHO	68. M4×8 KMHO
26. Pipe base	26. 導氣管座	69. M5×13 TMHO Inner hexagon	69. M5×13 TMHO 內六角
26M.048M Pipe base	26M.048M 導氣管座	70. Power cable	70. 電源線
27. Ø3×12 Shaft	27. Ø3×12 鑽軸	71. Stock rear cap	71. 槍托後蓋
27M.Ø2×12.5 Shaft	27M.Ø2×12.5 鑽軸	72. M4×12 KMHO	72. M4×12 KMHO
28. Front sight base	28. 前準星座	73. Magazine cover	73. 彈盒外殼
28M.048M Front sight base	28M.048M 前準星座	73M.048M Magazine cover	73M.048M 彈盒外殼
29. Front sight safety	29. 前準星配件	74. Magazine rear cover	74. 彈盒後蓋
29M.048M Front sight safety	29M.048M 前準星配件	75. Ø2×25.5 Shaft	75. Ø2×25.5 鑽軸
30. Front sight	30. 前準星	76. Ø2×21.5 Shaft	76. Ø2×21.5 鑽軸
30M.048M Front sight	30M.048M 前準星	77. Right trajectory	77. 右彈道
31. Decoration shaft	31. 槍頭裝飾軸	78. Left trajectory	78. 左彈道
32. Silencer fix stalk	32. 消音器定位軸	79. Gear	79. 上齒牙輪
33. Spring	33. 彈簧	80. Clockwork spring base	80. 發條彈簧底座
34. Decoration	34. 裝飾	80. Clockwork spring	80. 發條彈簧
35. Gear	35. 內齒牙	81. Clockwork spring cover gear	81. 發條彈簧蓋齒輪
36. M3×3 Screw	36. M3×3 螺絲	82. Driver	82. 傳動牙輪
37. Silencer	37. 消音器	83. C nail	83. C 圓銷釘
37M.048M Silencer	37M.048M 消音器	84. Gear	84. 送紙輪
38. HOP-UP	38. 過紙	85. Gear spring	85. 送紙輪彈簧
39. Rubber hop-up unit	39. 橡膠過紙	86. Eccentricity gear	86. 偏心輪牙
40. Inner barrel	40. 槍內管	87. Eccentricity gear	87. 偏心輪
41. Copper	41. 銅套	88. 3mm inner blocked ring	88. 3mm 內卡環
42. Gun barrel connect link	42. 槍管接紙	89. Magazine cover	89. 彈盒蓋
43. Rubber selector	43. 橡膠調節片	90. Bullet block	90. 止彈片
44. Hop-up cylinder rubber	44. 調節圓柱橡膠	91. Ø2.6×10 PAHO	91. Ø2.6×10 PAHO
45. Selector	45. 過紙調節片	92. Bullet block spring	92. 止彈片彈簧
46. Block	46. 扣手塊	93. Magazine button	93. 彈盒扣

ELECTRIC AIR GUN 電動汽彈槍			
Name 名稱	CM.048	CM.048M	
Overall length 全長	962mm	915mm	
Weight 重量	3365g Including battery 3365克 包含電池	3310g Including battery 3310克 包含電池	
Magazine capacity 裝彈數	500 rounds 500發	600 rounds 600發	
Bullet 子彈	6mmBB bullets 6mmBB彈	6mmBB bullets 6mmBB彈	
Initial bullet speed 初速度	120m/sec (0.2g bullet) 120米/秒 (0.2g BB彈)	120m/sec (0.2g bullet) 120米/秒 (0.2g BB彈)	
Full auto shooting speed 連射速度	700 to 850 rounds/min 700-850發/分	700 to 850 rounds/min 700-850發/分	


Users restricted to  
18 years of age or older  
使用年齡對象18歲以上

# CM.048& CM.048M

## AUTO ELECTRIC GUN




**CM.048**



**CM.048M**


**在操作之前必需读熟这些说明书**  
Always read through this manual before operation.



**警告 WARNING**


18岁以上才能使用  
Only for 18 years of age or older

18岁以上才能利用这支汽枪比赛使用  
Operation of this air gun for competition use is restricted to users of 18 years of age or older.

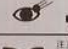

注意受伤  
Injury caution

因为BB 弹能达50-60米范围, 不小心射中可能导致眼睛受伤或其它伤害  
Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.

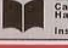

注意读熟警告指示手册  
Careful reading of Handling cautions and instruction manual

在操作之前必需读熟警告指示手册和指示手册操作汽枪时必须认识警告指示  
Always read through this HANDLING CAUTIONS AND INSTRUCTION MANUAL carefully before operation.  
Operate the air gun with full recognition of warnings and cautions.



## 警告

Always wear eye protective gear. 玩槍時，請始終戴着眼保護裝置。



When shooting the air gun for a target or game, you and all participants must wear goggles or other eye protective gear, also paying attention to ricochets. (Pay sufficient attention also to third personnel other than participants.)

當使用汽槍射擊目標或遊戲時，你和所有的參與者都必須戴著防護眼鏡或其它眼保護裝置，同時要注意彈的彈跳方向。（而且要特別注意不能射向遊戲者以外的第三者。）

You may be punished if you are shooting for a practical joke.

如果用汽槍開惡意玩笑，可能會受到懲罰。



You may be punished if you damage public or personal properties or injure a person or animal even if you are shooting for a practical joke. Always observe manners and enjoy healthy sport shooting.

如果你損害公共的或私人的財產，或者傷害人或動物，即使你是在進行射擊實踐遊戲，你也會受到懲罰。請始終守規定，享受有益健康的運動射擊。

Never disassemble or modify the air gun. 避免拆除或修改該氣槍。



This air gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the gun may generate danger or adversely affect the performance. So, avoid disassembling or modifying the air gun.

該汽槍是根據適當的性能和操作而製造的。拆除或改裝汽槍可能產生危險或者違反操作。因此要避免拆除或改裝該汽槍。

Never look into the gun muzzle. 禁止直接目視槍口。



Do not look directly into the muzzle to avoid accidental discharge of BB. 不要直接地看槍口，避免BB彈意外射擊。

- Make sure to operate an air gun after recognizing its features.
- We are not responsible for any accidents, events, injuries or repair costs arising from wrong operation and handling or by modification and disassembly of the gun.
- 請確實在了解其特徵之後再使用該汽槍。
- 對於任何由錯誤操作或改裝和拆卸汽槍所引起的意外事故，突發事件，受傷或修理費用，我們將不負責任。

## THOROUGHLY UNDERSTAND THE WARNINGS AND CAUTIONS FOR SAFE OPERATION.

詳細閱讀說明書中要注意的操作，才能安全的使用本產品。

- Read through this manual before shooting paying special attention for safe operation. 在使用前，請仔細閱讀本說明書，以便安全的操作本產品。



Always observe warnings and cautions strictly. Failing to do so may cause injury, accidents, or damage to the gun. 要嚴格遵守本產品中的警告及注意事項。否則將造成傷害或是槍支的損害。

### 1 Charging the battery (Battery and charger sold separately.) 電池充電器（電池和充電器有單獨出售）

- Please use the special battery: 8.4V 1200mAh. Do not use nonstandard battery or the other brand battery, or it will fall short of design demand. 使用槍支專用的電池。8.4伏，1200毫安高倍率電池。請避免使用非標準或其他品牌的電池，否則將達不到設計要求。

請使用專用電池  
Use the specified battery



8.4V Typer Command Battery  
8.4V高倍率電池




Exclusive Charge for Mini Battery  
小電池專用的充電器

CAUTION The SD and Mini Battery can not be used.  
△注意 不能使用SD和小類型的電池。


- Use the specified battery charger which is applicable to the above battery. The charger Exclusive Type ac Speed Charger. 使用上述電池專用充電器。
- The battery's capacity power is increased with use of the Exclusive (battery) Discharger (Sold separately) 使用專用的電池充電器會增加電池的能量。（有單獨銷售）
- Use the correct battery and charge according to respective instruction manuals. We will not be held responsible for any accidents or damage caused by wrongful operation or usage of non-specified batteries. 請根據使用手冊使用標準的電池和充電器。如果沒有按照說明書操作或者使用非專用的電池而引起的事務或傷害，我們將不負責任。



## 2 THE NAME OF THE PARTS(For details,see the following pages.) 各部分名稱 (具體請參照下面)

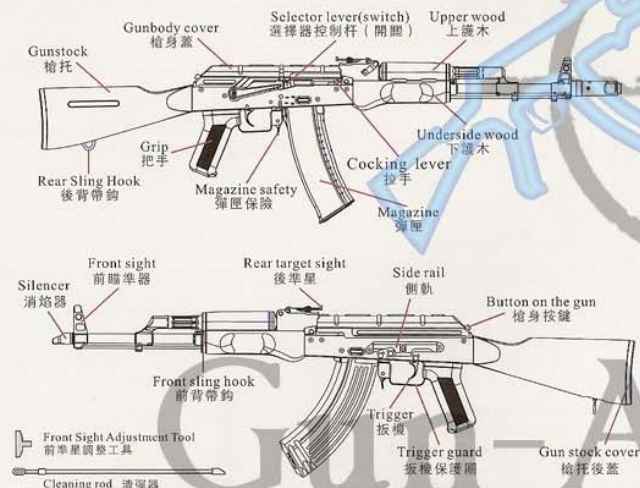

## 3 Selector lever and safety setting 選擇控制杆和安全裝置

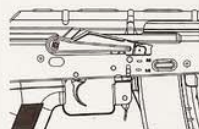


- To prevent malfunction of the switch do not change the selector lever from semi to full auto while pulling the trigger.

為防止開關發生故障，在按扳機時，不要將選擇控制杆從半自動改到全自動。

**CAUTION** Set the selector lever correctly in position otherwise, malfunction may occur.  
**注意** 將選擇控制杆設置在正確的位置，否則將會發生故障。


- Safety setting(the trigger cannot be pulled.)  
安全裝置 (不能按下扳機)

When you are not firing the gun or during storage always set the selector to the safe position.  
當你不用槍或在裝子彈時，請將選擇器設置在安全位置。

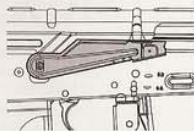


- Fully automatic(automatic firing)  
全自動 (連擊)

The gun will fire automatically while the trigger remains pulled.  
按緊扳機，汽槍將自動射擊。

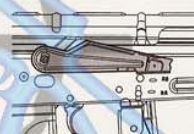


- Semi automatic  
半自動


The gun will fire one shot each time the trigger is pulled.  
每按一次扳機，汽槍將發射一發BB子彈。

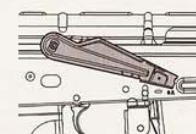


## 4 Setting the Battery(Set the battery after charging) 安裝電池 (用充電器先把電池充滿)

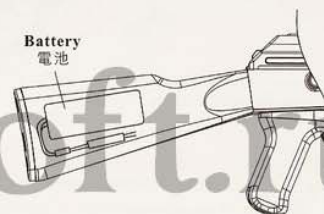

Battery connection  
電池連接器

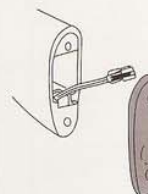


- Use the screw that the screw knife cover after revolve a gun give, take out to link the line plug.  
用螺絲刀旋出槍托後蓋的螺絲，取出連接線插頭。

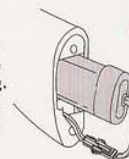

- Insert the battery in the tail gunstock and connect the jack.  
將電池裝入槍托裏并接上連接器。



- Press down the fuse box and insert connectors and cords between the fuse box and battery. Bend cords in the S shape.  
壓入保險絲盒，然後在保險絲盒和電池之間插入連接器和電線。將電線彎曲成S形。

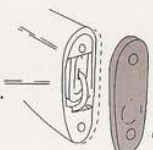

- When the battery and cords are set in positions, press step anti-cover after pack return toward operation.  
當電池和電線正確安裝後，按④步的反向操作裝回後蓋。

## 5 SETTING THE MAGAZINE 安裝彈匣

- ① Open the cover of the magazine  
打開彈匣蓋



- ② Replace the magazine cover  
蓋上彈匣蓋



- ③ Set the magazine upward. Install the magazine as illustration.  
從上方安裝彈匣。可以按箭頭所示步驟安裝彈匣。



1. First set the front.  
首先裝前方

2. Press to the rear.  
向後按

3. Press the release lever towards the trigger to lock.  
朝扳機方向按下并鎖定。

- ④ Insert 6mm BB bullets into the loader  
500 bullets can be loaded.  
(048M magazine capacity 600BBS)  
將6mm BB彈裝入彈盒  
可裝入500發BB彈  
(048M彈盒可裝入600發BB彈)

- ⑤ Move the gear with hand  
clockwise until it is fully  
wound, and the bullets will  
be sent up automatically.  
(It can send about 150  
rounds automatically).  
以順時針方向撥動牙輪，  
直到上滿鏈，子彈就會  
自動往上送。  
(能自動送彈約150發)。

### CAUTION △注意

The magazine is capable of  
Containing 600 BB bullets.  
彈匣可裝600發BB彈。

Magazine stopper relief rib.  
彈匣自動  
裝置解除鈕。



Slide the rib in the arrow direction  
to remove remaining BB bullets.  
(Be careful since BB bullets may  
jump out.)  
按箭頭方向移動按鈕取出剩餘BB  
子彈。(小心BB子彈可能會跳出)

### CAUTION △注意

⑥ Always use the BB bullets for the air gun. We shall not be held responsible for any  
damage or accidents arising from the use of bullets supplied by other manufacturers.  
這種氣槍祇能使用標準的6mmBB彈。如果使用其他供應提供的子彈而引起的損害  
和事故，我們將不負任何責任。




## 6 Rear sight adjustments 後瞄準器的調節

Rear sight  
後瞄準器

Long distance  
遠距離

Short distance  
近距離

Sight  
瞄準器

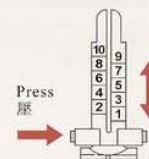

Press  
壓

Elevation(up/down)adjustment button  
仰角(上/下)調節按鈕

The AK series rear sight is a tangent type which is adjusted vertically according to distance to  
the target.

AK系列氣槍的後視屬於相對獨立的類型。它是根據目標的距離垂直方向調整的。  
Press the adjust button and slide is forward or backward to move the sight up or down.  
The larger the number, the longer the distance to the target.  
按下調整按鈕向前或向後滑動以調整視野，數字越大，距離目標就越遠。

## MOVABLE PARTS 可移動的部件



The cocking lever  
can be moved.  
拉手是可移動的



Variable hop-up  
adjustment lever  
可變化的跳動調整杆

## INSTALLATION OF THE ELIMINATE BLAZE IMPLEMEN 消焰器的安裝



- ① While pressing the lock button.  
按下鎖定鍵

- ② Remove by turning the Eliminate blaze implement.  
旋轉消焰器

The eliminate blaze implement is  
fixed by counterclockwise as in  
the case of real gun.  
與真槍一樣，消焰器是用反向旋  
固定的。

## 7 Firing(Confirm your shooting are a is safe before beginning firing.) 射擊(射擊前，確保射擊地方是安全的)

- ① Set the selector lever to Semi or Full Auto.  
把控制杆從設置在半自動或自動的位置

- ② Pull the trigger  
按住扳機



A blank firing may occur at triggering after the magazine, this is the normal operation of the gun.  
當在你裝上子彈開始射擊時，可能會有空白的射擊，這是屬於槍的正常的情況。



# CAUTIONS ON MOTOR AND BATTERY 發動機和電池使用注意事項

- Charge the battery if the firing cycle becomes slow.  
當射擊速度變慢，請充電。
- Give the air gun a rest for 5 to 10 minutes after firing about 500 rounds, in order to ensure long service lives of the motor and battery.  
為了確保發動機和電池的壽命，在射擊500輪後，給氣槍5-10分鐘的間歇。


# WHEN BULLETS ARE CLOGGED 當子彈阻塞時，應採取的措施

- If bullets are clogged, remove them and apply a few drops of silicone oil in to the chamber from the magazine entrances shown or spray silicone oil for 0.5 or 1 sec. to obtain smooth continuous.  
假如子彈阻塞，把子彈取出來，為了以後順利的射擊，請從子彈匣的入口處往槍膛滴上或噴上幾滴潤滑油。

# AFTER OPERATION 使用之後

- Remove the magazine and dry fire the gun in the semi auto mode directing the muzzle to a safe direction. (Otherwise the spring may be weakened). Set the selector to the Safe position.  
把子彈匣取出，在半自動的模式下，把槍對着安全的地方射擊。  
(否則，彈簧彈性可能會變弱)把選擇器調到安全(safe)這一檔。
- Bullets may remain in the chamber even if the magazine contains no bullets (or if the magazine is not connected). (Two or three bullets may drop from the magazine, this is the normal operation of the gun.)  
即使彈倉裏沒有子彈，(或彈倉被取出後)子彈也可能會留在槍膛裏。
- Always disconnect the battery and attach the protective cap whenever you do not operate the air gun.  
當你不用氣槍時，必須斷開電池。

Always attach the protective cap during storage.

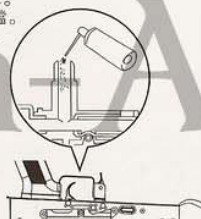

# CAUTION △ 注意

- There are possible cases that no firing occurs after pulling the trigger in the semi-auto mode. In this case, do not pull the trigger furiously. Fire 5 to 6 shots in the full auto mode and then return to the semi auto operation.  
在半自動的狀態下，有可能你按住扳機之後，子彈沒有射出來。遇到這種情況，不要猛烈地按住扳機，在全自動的狀態下，射擊5到6發，然後再調到半自動的狀態下嘗試。
- Smell may be generated from motor for a while when a new air gun is operated. This is the normal operation of the gun.  
剛開始使用新氣槍時候，可能會有一股味道。這股味道是電機運轉時產生的，這種情況屬於正常現象。
- The hopping up operation may be unstable for 200 to 300 rounds after using silicone oil, this is the normal operation of the gun.  
使用潤滑油之後，槍支的前200到300發可能不太穩定，這種情況屬於正常現象。

# 8 TROUBLE CLINIC (TROUBLE SHOOTING) 故障診斷 (維修之前請確認是否發生故障)

SYMPTOM 症狀	CAUSE 原因	ACTION 方法
No operation at all 無法操作	Select or is set to safety. 選擇 (器) 杆調在安全這一檔 (Safety)	Set the selector lever to Semi or Full Auto 把選擇 (器) 杆調在半自動或全自動檔
	Battery is not charged. 電池沒有充電	Charger the battery 給電池充電
	Battery connector is disconnected. 電池連接器被斷開	Connect the connector 連接連接器
	The + and - or battery connector is revers. 電池的正負極連接器倒置	Connect the connector correctly (check the fuse) 正確連接連接器 (檢查保險絲)
	Fuse is blown out 保險絲爆裂	Relace the fuse (See page ) 重新換上保險絲 (見頁)
Although motor is removing, bullets jump out. 電機沒有發生故障，但子彈無法正常發射。	Expired motor life (50,000 to 60,000 rounds) or poor electrical connection. 50,000到60,000發時，馬達壽命可能耗盡或電線連接老化	Replace the motor (purchasing from your dealer or us) or check and repair the contacts 換新的電機 (可向經銷商或我們購買)，或者仔細檢查和修理電線接觸點
	Bullets are clogged in the magazine 子彈阻塞在彈倉裏	Insert the charging rod into the magazine and move up and down a few times to remove clogged bullets 用裝載杆插進彈倉裏，上下移動幾次，把阻塞的子彈移出
	Bullets are clogged in the chamber 子彈阻塞在 (槍) 膛裏	Remove clogged bullets using the cleaning rod 用 (槍支的) 清彈器把阻塞的子彈取出
Impossible full-auto operation. (Automatic firing) 不能連發 (子彈無法射出)	Faulty gear 齒輪壞了	Purchase the replacement gear from your dealer and repair 向經銷商購買新的齒輪後進行維修
	Insufficient battery power 電池電量不足	Charge the battery 給電池充電
Impossible semi-auto operation. (Single shot) 不能單發	Faulty bullet feed of magazine 彈倉裏的子彈裝錯	Repair clogging the magazine 清理彈倉裏的堵塞物
	Poor electrical connection 電線連接不好	Consult your dealer or us for overhaul maintenance or repair 向經銷商諮詢如何維修
	Deviation in gear timing 齒輪調配偏差	Set to semi auto firing 5 to 6 rounds in full auto 在全自動這一檔射擊5到6次後調到半自動檔

Use of poor quality BB bullets will cause problems. Never disassemble or modify the gun.  
如使用低質量的BB彈將出現問題。不要拆卸或修改槍支。

SYMPTOM 癥狀	CAUSE 原因	ACTION 方法
Impossible semi-auto operation.(Single out) 不能半自動操作	Insufficient battery power. 電池電量不足	Charge the battery 給電池充電
Automatic firing become shorter. 連發射擊變慢	Insufficient battery power. 電池電量不足	Charge the battery 給電池充電
Shooting distance become shorter 子彈射程變短	Worn or damaged chamber packing. (槍)膛材料太舊或壞了	Consult your dealer or us for overhaul maintenance or repair. Replace the chamber packing. Piston packing(O-ring)and piston assembly. 向經銷商諮詢如何維修。重新換上膛腔材料, 活塞材料(O形圈)和活塞組裝件。
	Worn or damaged chamber packing.(O-ring) 膛腔材料(O形圈)太舊或壞了	
	Deteriorated piston spring. 活塞彈簧損壞	
	Faulty BB bullets. (Too small or heavy) BB子彈不合格(太小或太重)	Use the genuine BB bullet 使用質量合格的BB彈
	Faulty gear. 齒輪壞了	Purchase the replacement gear from your dealer and repair 向經銷商購買新的齒輪後進行維修
	Gear problem caused by too many blank firing or worn or damaged gear. 太多的空白射擊導致齒輪出現問題或者齒輪老化或損壞	Consult your dealer or us for overhaul maintenance, part replacement(gear etc) or repair 向經銷商諮詢如何維修, 零件替換(齒輪等)
Too loud operating noises 噪音太大	Gear problem caused by too many blank firing 太多的空白射擊導致齒輪出現問題	Turn the hop adjustment lever toward HOP 把調節杆調到HOP位置
Bullets being follen out from barrel end. 子彈從槍管頭彈出	Worn or damaged chamber packing (槍)膛材料太舊或壞了	
	No hop setting 沒有設置HOP	
	Faulty BB bullets. (Too small) BB子彈不合格(太小)	Use the genuine BB bullet 使用質量合格的BB彈
Being wet or drop into water.(rain) 槍支弄濕或掉進水裏(雨淋)	Stop operation immediately, disconnect the battery, wipe off water from water from inside the main body and the battery, and after complete dry, carry out trial firing, if no operation or malfunction is detected, consult your dealer or us for repair. 立刻停止使用, 斷開電池, 把電池和槍支內部的主要部分擦幹, 等槍支完全幹了之後, 再嘗試射擊。假如無法使用或者發現故障。向經銷商或我們諮詢如何維修。	

## 9 VARIABLE HOP UP SYSTEM 可變化的Hop Up系統

By producing a back-spin to the BB bullets, this system allows for straighter and longer distance shooting than normal air gun. Unlike the fixed type, the variable hop up system permits one-touch adjustments using the dial and lever, making it an ideal hop up system.

通過使子彈逆轉, 可以使射擊比一般的氣槍射得更直和更遠。不像其他的固定類型的氣槍一樣, 可變化的Hop Up系統可以使用轉盤和調節杆來進行調整。

Adjustment Procedure(Adjust by carry out trial firing)

調節程序(通過試射擊來進行調節)



Gradually turn the adjustment dial towards Hop to give hop up to bullets. (The best setting is where bullets fly horizontally.)  
把調整盤慢慢移向跳躍方向。(最佳設置為子彈水平方向射出)

- Turning excessively adversely affects the trajectory. So stop turning the hop adjustment lever when bullets fly horizontally.  
向相反的方向用力的扭轉可能會影響到彈軌。因此, 如果子彈能够水平射出, 就停止扭轉調節杆。

- The best position is where the bullets fly horizontally, and the longest flying distance is obtained.  
最佳的位置是子彈水平方向射出, 此位置使子彈達到最遠射程。

 
Too much hop-up (return the lever towards NORMAL)  
過度上旋(將調節杆拉回正常位置)

Best position  
最佳位置

Not enough hop-up (return the lever towards NORMAL)  
上旋不到位(將調節杆拉回正常位置)

OPERATIONAL CAUTION  
(strictly observe the following caution)  
操作注意事項:(要注意以下的事項)

- Moving the lever too much towards HOP causes bullets to clog. Firing the gun with clogged bullets damages the piston and gears.  
調節杆過度調向跳躍方向會導致子彈堵塞, 子彈堵塞的情況下射擊會導致活塞和齒輪的損壞。
- If bullet clogging occurs, immediately stop firing the gun, return the hop lever to the Normal position and remove clogged bullets using the cleaning rod.  
如果子彈堵塞, 請立即停止, 把跳躍杆調至正常位置, 用清彈器取出堵塞子彈。
- Make sure to return the hop adjustment lever to the Normal position when removing clogged bullets or cleaning. (Otherwise, the chamber packing is damaged.)  
在取出堵塞子彈時或進行清潔時, 要把HOP調節杆調到正常的位置(Normal)(否則可能會損害膛腔)
- Never use used or dirty bullets. (Otherwise, the chamber becomes dirty, resulting in unstable hopping up.)  
不要重複使用子彈或使用臟子彈。(否則彈腔會變臟, 從而導致跳躍的不穩定)
- When about 10000 rounds are fired, spray silicone oil into the chamber for 0.5 to 1 sec. (See 11 on page 8. The hopping up operation may be unstable for 200 to 300 rounds after spraying the silicone oil, this is the normal operation of the gun.)  
射擊大約10000顆子彈, 用硅油噴彈腔0.5-1秒。(在噴硅油後, 200-300輪射擊的跳躍操作會不穩定, 這種情況屬於正常現象。)
- We will not be held responsible for any damage or accidents arising from wrongful operation, disassembly and modification of the gun. Any costs for repair of such damage shall be paid by the user.  
由於錯誤操作, 重組裝或改裝氣槍所引起的損壞或意外, 我們一律不予負責, 由此產生的維修費用由用戶自行承擔。

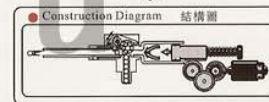



# CAUTION

- If the hop-up is adjusted excessively causing clogging of bullets, immediately stop operating the gun. Return the lever to Normal, fire 2 or 3 shots and readjust.  
假如hop-up過分地調整可能會導致子彈的阻塞，遇到這種情況，立刻停止使用，把調節杆調至正常射擊(Normal)狀態下，射擊2到3發，然後重新調整。
- Since a precision tight barrel is used, use of dirty bullets or those with burrs causes clogging of bullets and possible fatal damage to the mechanical box and system.  
由于槍管非常精密，如果使用臟的子彈可能會導致子彈阻塞和很致命的損壞槍支。

# WARNING

- Never hold the gun side ways as the BB bullets will curve tight or left. This is due to the HOP-UP system.  
不要從側面握住槍支進行射擊，因為BB子彈射出時可能會偏左或者偏右。



# WHEN HOPPING UP IS IMPROPER


跳躍不正常現象

SYMPTOM 癥狀	CAUSE 原因	ACTION 方法
Bullets flying upwards. 子彈向上飛	Too much hop setting (hop)設置太大	Gradually return adjustment lever towards Normal. 把調節杆逐漸地調到正常狀態。
Short flying distance of bullets (less hopping up effect). 子彈射程太短 (短于跳躍應有效果)	Too much hop setting (hop)設置太大	Gradually return adjustment lever towards Normal. 把調節杆逐漸地調到正常狀態。
	Hop packing contaminated by oil or dirt. Hop包裝被油迹或污垢沾污	Fire bullets equivalent to 4 or 5 magazines or clean the chamber using cleaning rod. 用 (槍支的) 清潔器清潔槍膛。
	Worn or damaged hop packing Hop包裝太舊或被損壞	Purchase the replacement part at your dealer or from Marui and replace it. 向經銷商或我們購買所需配件，更換hop裝置。
Cannot adjust 不能調節	Damaged adjustment lever or other parts 調節杆或其他部件損壞	Purchase the replacement part at your dealer and replace it. 向經銷商購買所需配件，更換hop裝置。
Frequent bullets clogging 子彈經常阻塞	Too much hop setting (hop)設置太大	Gradually return adjustment lever towards Normal. 把調節杆逐漸地調到正常狀態。
	Improper or too large sized BB bullets BB彈不合適或太大了	Use the BB bullets for Electric Gun. 使用標準BB彈。
	Dirty hop packing Hop包裝弄臟	Clean using the cleaning rod or consult your dealer for repair. 用 (槍支的) 清潔器清潔或者向經銷商諮詢維修。

# 10 MAINTENANCE

## 1. Fuse Replacement Procedure

更換保險管

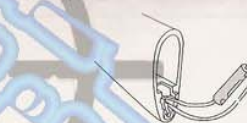

The fuse box comes out when the connectors are pulled out of the stock.  
當連接器從槍托裏拉出來時，也把保險管拉出來。


Fuse box (when fuse is replaced, push into the stock all the way).  
保險管盒 (需要換新保險管後，直接把它推進槍托裏)。

**Glass tube fuse 保險管**  
You can buy it at a near-by electric shop or gas station. 你可以在附近的五金店或電器店買到它。  
20A Fuse common for electric gun series. 常用於電動槍系列的20A保險管。


## 2. Remove the obstruct bullets

 拆卸堵塞子彈

- Insert the cleaning rod into the bore.  
沿槍管的內邊緣插入清潔器。

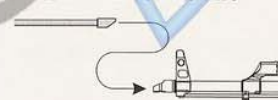

- Be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.  
確保清潔器的角部分向下，并清楚堵塞子彈。

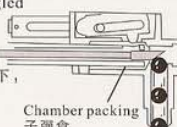

The ornamental can not be used for cleaning the obstruct bullets.  
附在氣槍上的裝飾條模型不能用于清除堵塞子彈。  
Make sure to insert the cleaning rod AFTER returning the hop up lever to the Normal position. (Hop-OFF)  
確保跳躍調節杆回到正常位置才能插入清潔器。

## 3. Maintenance When Bullet Speed Become Low

當子彈速度變慢時怎樣維修



Cut the cotton to the size shown. Adjust the length accordingly so that it can be inserted smoothly into the barrel.  
將棉線剪成圖所示的大小。適當地調整長度，以便於將其順利地推進槍管裏。

Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.  
當調節杆關閉時，握住清潔器的前端把它插入槍管裏。



- Inserting the rod will be difficult if you hold rod at the end.  
假如你緊握清潔器的末端，清潔器推進去可能會很困難。
- Since the chamber is a precision component, avoid use of used BB bullets.  
由于槍膛是一個精確的部件，請避免使用用過的BB彈。
- Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF)  
在將HOP-UP撥回正常位置後，才能進行維修保養。

Apply a few drops of silicone or Teflon oil.  
滴幾滴硅油或特氟龍油。


- Drop a few drops of silicone oil or Teflon oil from the bullet entrance, insert BB bullets into the magazine and fire bullets equivalent to 1 or 2 magazine.  
從子彈的入口處滴幾滴潤滑油。把BB子彈裝進彈倉，射擊1或2次。
- To complete the cleaning, use the cleaning rod (with cotton) as shown below, to remove excess oil. 使用槍支清潔器按照以下說明除去多餘的潤滑油。

#### 4. FINE ADJUSTMENT OF GEAR ENGAGEMENT 齒輪啮合的微調

Remove the screw from the grip bottom.  
在把手底部擰開螺絲。

M3 hexagon wrench  
M3六邊形扳手

Insert M3 hexagon wrench into the screw hole to adjust.  
將M3六邊形扳手插入螺絲孔裏調整。

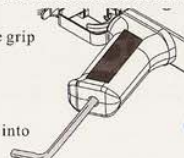

Only when the motor noise becomes high after operations for a long period of time, conduct the fine adjustment as shown.  
若使用時間過長，電機發出很大的噪音時，請按如圖所示對電機進行微調。

Hold the grip during adjustment. Otherwise, the main body will drop since the grip set screw is removed.

在調整時要握緊把手。否則，主體會因為固定把手的螺絲被取下來了而掉出來。

- It is recommended to lock the adjustment screw by a screw locking agent or instantaneous adhesive after adjustment of the motor position is complete.  
建議你在馬達位置調整完成後，使用螺絲釘固定器或瞬間黏合劑固定調整螺絲釘。
- Normally, do not attempt to adjust.  
通常不要隨便調整。
- Be careful as not to overly tighten the screw as it will damage the gun.  
注意不要過度擰緊螺絲釘以免損壞氣槍。

