

No.	DESIGNATION 名稱	No.	DESIGNATION 名稱
75	Bullets adjustor right 發彈調節器右件	104	Clasper 扣紙
76	Connecting shaft 連接軸	105	Left trajectory 左彈道
77	M2.5×2.5 Screw M2.5×2.5釐力	106	Right trajectory 右彈道
78	Bullets adjustor left 發彈調節器左件	107	Magazine cover 子彈蓋
79	M2.5×2.5 Screw M2.5×2.5釐力	108	The hair plays the slice spring 發彈片壓簧
80	Locator spring 定位紙壓簧	109	Bullets block 止彈片
81	Locator 定位紙	110	Ø2×8 PBHO Ø2×8 PBHO
82	Limit slice 定位紙限位片	111	3mm inner blocked ring 3mm內卡環
83	M2×4 KMHO M2×4 KMHO	112	Bullets whisking gear 撥彈牙輪
84	Left gun stock connector 槍托左連接件	113	Bullets uploading gear 送紙輪
85	Right gun stock connector 槍托右連接件	114	Bullets pushing gear 推彈牙輪
86	Right gun stock cover 槍托右蓋	115	Clockwork base 發條座蓋
87	Left gun stock cover 槍托左蓋	116	Clockwork base and clockwork spring 發條座加發條
88	Aggravate iron 加重鐵	117	Eccentricity gear 偏齒輪
89	Gun stock skin 槍托皮	118	Missilery 導彈件
90	Ø3×8 KBHO Ø3×8 KBHO	119	Clockwork gear spring 發條輪扭簧
91	Connector of fix gunstock 伸縮槍托連接件	120	Ø2.0×5.5c naild=4 Ø2.0×5.5c頂銷釘d=4
92	Rear gallus hook 後背帶環	121	Eccentricity gear 偏齒輪
93	Gun stock limiting base 槍托限位座	122	Deliver spring 送輪簧
94	Gun stock release spring 槍托開關簧	123	Transition gear 過渡牙輪
95	Gun stock switch 槍托開關	124	Clockwork driving gear 發條傳動牙輪
96	Gun stock safety 槍托保險	125	Clockwork block 發條卡件
97	Gun stock limit gear 槍托限位輪紙	126	Ø2.0×5.5c naild=4 Ø2.0×5.5c頂銷釘d=4
98	Spring 壓簧	127	Ø2.0×4 PWBHO D=5.5 Ø2.0×4 PWBHO D=5.5
99	Gunstock taper 槍托錐形紙	128	Ø2.0×16 Shaft Ø2.0×16光軸
100	Rear gun stock pipe 槍托管正柱	129	Magazine crust 彈盒外殼
101	Gun stock connected pole block 槍托連接杆阻紙	130	Magazine rear cover 彈盒後蓋
102	Shrapnel block 彈片阻紙	131	Ø2.0×23 Shaft Ø2.0×23光軸
103	Gun guard 護木管		

MADE IN CHINA

CM.049SD6

SEMI & FULL AUTOMATIC AIRSOFT GUN



使用說明書
INSTRUCTION MANUAL

使用年齡對象18歲以上
Users restricted to
18 years of age or older

AUTO ELECTRIC GUN

ELECTRIC AIR GUN 電動汽彈槍		
Name 名稱		CM.049SD6
Overall length 全長		650/800mm (When stock is extended 當槍托延伸時)
Weight 重量		3335g (including battery 包括電池重量)
Magazine capacity 裝彈數		Hinged semi automatic magazine 鏈帶式彈匣: 260 BBs
Bullet 子彈		6mm BB bullets (6mmBB彈)
Initial bullet speed 初速度		120m/s (0.2g BB)
Full auto shooting speed 連射速度		700 to 850 round/min 700~850發/分



WARNING 警告



Certified shooting safety goggles
合格的發射防護眼鏡。
Wear protective eye wear & face mask when using airsoft guns.
當使用汽彈槍時，請戴上防彈眼鏡和面具。



Read and understand the operating and safety manual before using your airsoft guns.
在使用汽彈槍前，請先閱讀和理解操作安全手冊。



Do not look directly into the gun barrel to avoid accidental discharge of BB.
不要直接地看槍管，避免BB彈意外發射。



You may be punished if you damage public or personal properties or injure a person or animal even if you are shooting for a practical joke. Always observe manners and enjoy healthy sport shooting.

如果你損害公共的或私人的財產，或者傷害人或動物，即使你是在進行射擊實踐遊戲，你也會受到懲罰。請始終遵守規矩，享受有益健康的運動射擊。



Never aim or shoot a person or animal as the target. Always attach the protective plug to the muzzle, except when you are ready to shoot a target.

不可把人或動物當作目標瞄準或射擊。始終繫上槍口的防護塞，除非你準備去射擊一個明確的目標。



This air gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the gun may generate danger or adversely affect the performance. So, avoid disassembling or modifying the air gun.
該氣槍是根據適當的性能和操作性而製造的。拆除或改裝氣槍可能產生危險或者違反操作。因此要避免拆除或改裝氣槍。



- Please read the instructions carefully before use. (Please read the Notice in details.)
- Please retain the instructions for future reference. Don't use it improperly or refit the air gun.
- 使用前請先完整閱讀說明書（注意部份請詳細閱讀）
- 保存好此說明書以供日後使用參照，切勿錯誤使用或改裝汽彈槍。

在操作之前必需讀熟這些說明書

Always read through this manual before operation.

警告 WARNING	
	18岁以上年龄才能使用 Only for 18 years of age or older 18岁以上年龄才能利用这汽枪比赛使用 Operation of this air gun for competition use is restricted to users of 18 years of age or older.
	注意受伤 Injury caution 因为BB子弹能达40-50米范围，不小心的射击可能导致眼睛受伤或其它伤害。 Since plastic BB bullets reach 40 to 50 meters, careless shooting may cause eye damage or other injuries.
	注意熟读警告手册 Careful reading of Handling cautions and instruction manual 在操作之前要细心读熟警告手册和指示手册。操作汽枪时必须认识警告指示。 Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.


BATTERY AND CHARGE 電池與充電器

- 8.4v Ni-MH battery
8.4伏的鎳氫電池



Use the special battery for this gun
8.4V 1200mAh NIMH hyper command battery.
使用槍支的專用電池，8.4伏1200毫安的高倍率鎳氫電池。

- Exclusive charge for mini battery
鎳氫電池專用的充電器。

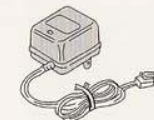

Use the specified battery charger which is applicable to the above battery.
使用專用的電池充電器對以上電池進行充電。

- Ni-MH battery discharger
鎳氫電池充電器

The battery capacity power is increased with use of the Ni-cd battery discharger (sold separately)
使用鎳氫電池充電器會增加電池的能量。（有單獨銷售）

Use the correct battery and charge according to respective instruction manuals. We will not be responsible for any accidents or damage caused by wrongful or usage of non-specified batteries.
請根據使用手冊使用專用的電池和充電器。如果沒有按照說明書操作或者使用非專用的電池而引起的事務或傷害，我們將不負任何責任。

1 COMPONENT NAMES 各部分名稱



WARNING-CAUTION



● Never operate the Selector while pulling the trigger. Otherwise, malfunctions are possible, resulting in accidents.

在按扳機的時候不能操作選擇器，否則可能造成故障，引發事故。

● Pulling the trigger with the Selector being set to seaf may damage the gun.

 

選擇器調在安全“seaf”這一位置時，如按扳機可能損壞槍支。

2 SELECTOR LEVER AND SAFETY SETTING


(Always set the safety lever to SEAF until immediately before firing.)

選擇控制杆和安全裝置（射擊之前把保險杆調到“SEAF”這一位置）


CAUTION: Set the selector lever correctly in position; otherwise, malfunction may occur.
注意：按正確方向調整發彈調節件，否則可能會導致意外發生。

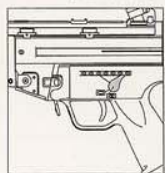

 Safety setting 安全裝置
The trigger cannot be pulled. 不能扣下扳機
When you are not firing the gun or during storage always set the selector to the safe position.
當你不在射擊或在裝子彈時，請將選擇器設置在安全位置。



 Semi automatic 半自動
The gun will fire one shot each time the trigger is pulled.
每按一次扳機，氣槍將發射一發BB彈。



fully automatic (automatic firing) 全自動（自動射擊）
The gun will fire automatically while the trigger remains pulled.
每按一次扳機，氣槍將連續射出BB彈。

3 LOADING OF THE BB BULLETS TO THE MAGAZINE AND SETTING THE MAGAZINE

請在彈匣里裝上子彈，然後把彈匣安裝在槍支上。



1 Make sure to set the magazine upwards and connect it firmly until a click sound is heard.

確保彈匣朝上并將其牢固地連接起來直到聽到咯噠一聲。



2 Press the magazine release to remove the magazine.(support the magazine as it may drop.)

按下彈匣保險以拆下彈匣。
(托緊彈匣以免它掉下來)

Press
按下

WARNING-CAUTION



● Always use the BB Bullets for the air gun.
這種氣槍只能使用標準的6mm BB彈。



We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.
如果使用其他供應商提供的子彈而引起的損害和事故，我們將不負任何責任。

Please ask each store a price

請向我們的經銷商詢問子彈的價格。

● Always attach the protective cap and disconnect the magazine to avoid sudden operation upon connector to the battery.

在不使用時，請將發彈調節件設置在安全位置及卸下彈匣。

! One point advice
一點建議

The conventional mini battery can also be used by the same wearing.
可以使用同一型號標準的小電池。

HINGED SEMI AUTOMATIC WAY OF LOADING THE MAGAZINE WITH BULLETS

鏈帶式半自動彈匣裝彈方式




1 Open the magazine
打開彈匣蓋



2 Load it with 6mm BB bullets until it's full.
裝入6mm BB彈，直到裝滿。



3 Replace the magazine cover.
蓋上彈匣蓋。

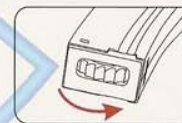

4 Move the gear with hand clockwise until it is fully wound, and the bullets will be sent up automatically.
以順時針方向扳動齒輪，直到上滿鏈，子彈就會自動往上送。


4 SETTING THE BATTERY (CONDUCT OPERATIONS HEREAFTER AFTER THE BATTERY)

如何安裝電池（電池充電後請按以下的說明操作）


CAUTION: The magazine is done under the condition that it is removed.
注意：要先卸下子彈匣。




1 Disassemble the hand guard release button
拆卸護手板扣件。

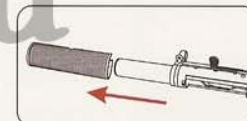


2 Move the hand board forward.
向前移動護手板。

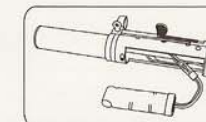

3 Install the battery
安裝電池。

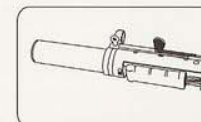

4 Fix the battery.
固定電池。

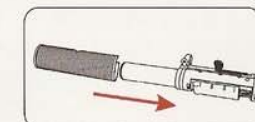

5 Move the hand board backward.
向後移動護手板。
Install the hand guard release button.
裝上護手板扣件。

WARNING-CAUTION

警告 • 注意

- Do not force Fore grip into place. It may damage the handle.

不要用力推動前部的把手。

- The adjustment screw will come off if it is turned excessively.

假如用力的扭轉，可調節螺絲可能會掉下來。

 
! One point advice
一點建議

Gun Series is capable of extraordinary hitting precision. Proper aiming and holding lead you to more accurate shootings.

槍支能够非常精確的射中目標。恰當的瞄準和把持使你有更高的命中率。


5 SETTING THE REAR SIGHT

設置后准星



For precise shooting, turn the sight by hand and use the smaller hole.


爲了更精確的射擊，請用手調節准星和使用最小的洞。

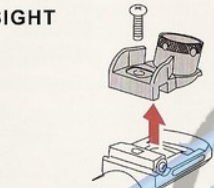

When you remove a rear sight, please remove a fixed screw and draw out a rear sight upwards.


當你在調節后准星時，請扭松固定的螺絲，然後把后准星往上移動。

- Loosen the screw 松開螺絲

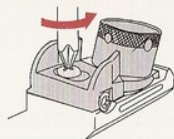

- To move the sight turn the adjustment screw using a screwdriver

用螺絲刀扭松可調節螺絲，然後就可以移動准星。

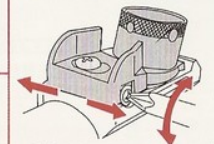

- When adjustment is complete, tighten the set screw.


當調節好了之後，扭緊螺絲。



- HOW TO AIM 怎樣射擊**

Bring the front sight to the hold of the rear sight, and aim the center of the target.

使前准星對准后准星的洞，然後瞄準目標的中心。

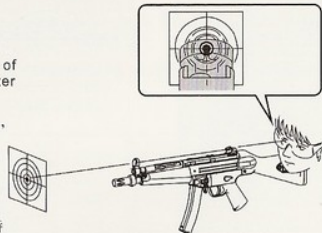

- HOW TO HOLD 怎樣把持**

Press the butt plate against slightly inside of the shoulder joint and put your cheek on the stock. Aim the center of the target through rear sight and front sight.

把蓋板（襯板）輕輕放在肩膀上，把頰掛在槍托上。眼睛穿過前准星和后准星瞄準目標的中心。

**WARNING-CAUTION**

警告 • 注意

- Be careful so that your skin and fingers do not get caught in the moving parts.

小心你的手指和皮膚不要被移動的部件傷到。


6 MOVABLE PARTS 可移的零件

- The cocking lever can be moved.

上膛拉杆可以移動。

- The bullets-tossed cap will move forward and backward while shooting, please take care of hand.

在射擊時拋彈蓋是會前後移動的，注意手不要被壓傷。

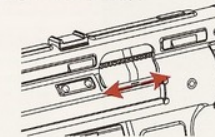

- The stock can be moved in 2 steps.

槍托可移動兩步。


A stock release lever is pushed down, a lock is canceled and a stock is lengthened.

推下槍托解鎖手柄，就能解除鎖，槍托加長。



stock release lever
解鎖手柄

Quick release mechanism.
快速的解鎖裝置。

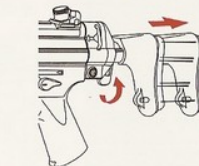

Press the gun stock release button to elongate the gun stock
推下槍托解鎖手柄，鎖就被解除，就可以拉長槍托。

7 INSTALLATION / DISASSEMBLY OF THE SILENCER

 
安裝和拆卸消聲器

- Installation of the silencer 安裝消聲器

- Turn it about 90.

旋轉大約90度。

(2)



Removal (1)

 
Show the running according to the arrow head.
按箭頭所示轉動。

- Disassembly of the silencer 拆卸消聲器

- Turn it about 90.

旋轉大約90度。

(2)



Removal

Show the running according to the arrow head.
按箭頭所示轉動。

WARNING-CAUTION
警告 • 注意

There are possible cases that no firing occurs after pulling the trigger in the semi-auto mode. In this case, do not pull the trigger furiously. Fire 5 to 6 shots in the full auto mode and then return to the semi auto operation.

在半自動的狀態下，有可能你按住扳機之後，子彈沒有射出來。遇到這種情況，不要猛烈地按住扳機，在全自動的狀態下，射擊5到6發，然後再調到半自動的狀態下嘗試。

Smell may be generated from motor for a while when a new air gun is operated, this is the normal operation of the gun.

剛開始使用新氣槍時候，可能會有一股味道，這股味道是電機運轉時產生的，這種情況屬於正常現象。


3 FIRING (Confirm safety sufficiently before beginning firing)
射擊 (在開始射擊時要確保做好安全措施)

CAUTION: Load the magazine charging the bullets, referring to "Setting the magazine"
注意 如下彈匣，裝上BB彈。參考 3 彈匣的安裝

1 Make sure to set the magazine upwards and connect it firmly until a click should be heard.
把彈匣向上裝到槍支上，確保牢固地連接到槍支上，要聽到“卡嗶”的一聲才可以。



2 Set the selector lever to Semi or Full Auto.
把調節杆設置在半自動或者自動的狀態下。

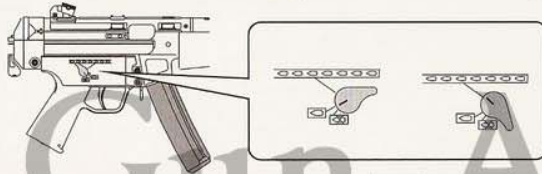

3 Pull the trigger. 按住扳機



CAUTION A blank firing may occur at triggering after the magazine, this is the normal operation of the gun.
注意 當在你裝上子彈開始射擊時，可能會有空白的射擊，這是屬於槍的正常情況。

AFTER OPERATION 使用之後

1 Remove the magazine and dry fire the gun in the semi auto mode directing the muzzle to a safe direction. (Otherwise the spring may be weakened). Set the selector to the Safe position.
把子彈匣取出，在半自動的模式下，把槍對着安全的地方射擊。(否則，彈簧彈性可能會變弱)，把選擇器調到安全 (safe) 這一檔。

2 Bullets may remain in the chamber even if the magazine contains no bullets (or if the magazine is not connected) [Two or three bullets may drop from the magazine, this is the normal operation of the gun.]
即使彈倉里没有子彈，(或彈倉被取出后)子彈也可能會留在槍膛里。

WARNING-CAUTION
警告 • 注意



The hopping up operation may be unstable for 200 to 300 rounds after using silicone oil, this is the normal operation of the gun.

使用潤滑油之後，槍支的前200到300發可能不太穩定，這種情況屬於正常現象。

Always disconnect the battery and attach the protective cap whenever you do not operate the air gun.
當你不用氣槍時，必須斷開電池。

WARNING Make sure no dirt gets into the chamber to avoid clogging of bullets.
警告 為了避免子彈阻塞，請確保槍膛裏沒有灰塵。

CAUTIONS ON MOTOR AND BATTERY 電機和電池應該注意的問題

1 Charge the battery if the firing cycle becomes slow.
當射擊速度變慢，請充電。
2 Give the air gun a rest for 5 to 10 minutes after firing about 500 rounds, in order to ensure long service lives of the motor and battery.
為了確保電機和電池的壽命，在射擊500發後，給氣槍5-10分鐘的間歇。


WHEN BULLETS ARE CLOGGED 當子彈阻塞時，應採取的措施

If bullets are clogged, remove them (refer to 11P) and apply a few drops of silicone oil into the chamber from the magazine entrances shown or spray silicone oil for 0.5 or 1 sec, to obtain smooth continuous.

假如子彈阻塞，把子彈取出來(參考11頁)，為了以後順利的射擊，請從子彈夾的入口處往槍膛滴上或噴上幾滴潤滑油。

CAUTION
注意

Never use or other mineral oil.
不要使用其他的礦物油。

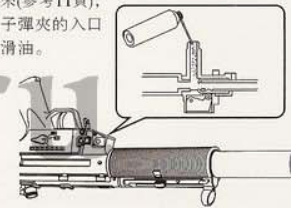


Operational Caution (Strictly observe the following caution)
操作注意事項：(要注意以下的事項)

1 When about 10,000 rounds are fired, spray silicone oil to the chamber for 0.5 or 1 sec. (The hopping up operation may be instable for 200 to 300 rounds after spraying the silicone oil, which is not a problem.)
射擊大約10000發之後，要向槍膛噴上潤滑油。(噴上潤滑油之後，射擊可能不太穩定，這是很正常的情况。)

2 We shall not be responsible for any damage or accidents arising from wrong operation. Disassembly and modification of the air gun.
由於錯誤的操作或拆卸或修改氣槍而引起的任何事故，我們不負任何責任。

 Any costs for repair of such damage shall be paid by the user.
由於以上的原因而引起的損壞，維修費用由用戶承擔。



WARNING • CAUTION

警告 • 注意

- When bullets are clogged. Immediately stop operation. Remove clogged bullets and then restart operation of the air gun. (If operation is continued with bullets being clogged, the mechanism may be damaged)
子彈阻塞後，應該立刻停止使用。把阻塞的子彈取出，然後重新開始使用氣槍。（假如子彈阻塞後，還繼續使用，可能會損壞槍支。）
- Since clogging bullets may jump into out at a high speed, always wear safety goggles and confirm safety. 由於被阻塞的子彈可能會以很快的速度彈出，維修的時候務必戴上護目眼鏡以保證安全。
- Never use any used BB bullets. 不要使用用過的BB彈。
- The fuse may blow out due to an electrical over current. Malfunctions of the internal mechanism are possible. So, check and then connect the battery again. 由於過高電流，保險絲可能爆裂。如內部機械裝置出現故障，請檢查故障部分，然後重新連接電池。

9 1. MAINTENANCE WHEN BULLET SPEED BECOME LOW
當子彈速度變慢時怎樣維修

- 1 Drop a few drops of silicone oil or Teflon oil from the bullet entrance, insert BB bullets into the magazine and fire bullets equivalent to 1 or 2 magazine.
從子彈的人口處滴幾滴潤滑油。把BB子彈裝進彈倉，射擊1或2次。
- 2 To complete the cleaning, use the cleaning rod (with cotton) as shown below, to remove excess oil.
使用槍清彈器按照以下說明除去多餘的潤滑油。



hold at the leading end of the rod and insert the rod into the barrel while turning the rod.
當調節杆關閉時，握住杆紅的末端把它插入槍管裏。

CAUTION
Inserting the rod will be difficult if you hold the rod at the end.
假如你緊握清彈器的末端，清彈器插進去可能會很困難。

2. REMOVING CLOGGED BULLETS
取彈方法


Return the hop up dial to the Normal position and insert the cleaning rod from the lead edge of the barrel.
將上旋調節控制盤轉回到正常位置，並將清彈器從槍管的邊緣插入。

be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.
注意清彈器的尖角部分必須朝下，再取出塞滿的子彈。

3. FUSE REPLACEMENT PROCEDURE 更換保險管

The fuse holder is accessible when the hand guard is removed.
護手板移開後就可以看到保險絲架。


Remove it from the reverse side, Remove the fuse holder while pressing nail. (After fuse is replaced, reinstall in the original operating condition)
從背面取出保險絲。按一下釘子就可以移開保險絲架。（更換新的保險之後，按照原來的操作程序進行重新安裝）

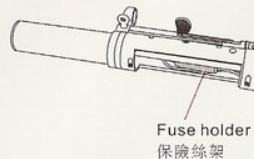

10 TROUBLE CLINIC (TROUBLESHOOTING) Confirm before calling for repair

故障診斷(維修之前請確認是否發生故障)

SYMPTOM 症狀	CAUSE 原因	ACTION 方法
No operation at all 無法操作	Selector is set to safety. 選速(器)杆調在安全這一檔(Safety)	Set the selector lever to Semi or Full Auto. 把選速(器)杆調在半自動或全自動檔
	Battery is not charged. 電池沒有充電	Charger the battery. 給電池充電
	Battery connector is disconnected. 電池連接器被斷開	Connect the connector. 連接連接器
	The ⊕ and ⊖ or battery connector is revers. 電池的正負極連接器倒置	Connect the connector correctly. (check the fuse) 正確連接連接器(檢查保險管)
Although motor is removing, no bullets jump out. 電機沒有發生故障，但子彈無法正常發射。	Fuse is blown out. 保險管爆裂	Relace the fuse. 重新換上保險管
	Expired motor life (50,000 to 60,000 rounds) or poor electrical connection. 電機老化或者電線連接錯誤	Replace the motor (purchasing from your dealer or us)or chek and repair the contacts. 換新的電機(可向經銷商或我們購買)，或者仔細檢查和修理電線接觸點。
	Bletts are clogged in the magazine. 子彈阻塞在彈倉裏	Insert the charging rod into the magazine and move up and down a few times to remove clogged bullets. 用裝載杆插進彈倉裏，上下移動幾次，把阻塞的子彈移出。
Impossible full-auto operation. (Automatic firing) 不能自動操作(子彈無法射出)	Bletts are clogged in the chamber. 子彈阻塞在(槍)管里	Remove clogged bullets using the cleaning rob.(see page 11) 用(槍)枝的清彈器把阻塞的子彈取出(見11頁)
	Faulty gear. 齒輪壞了	Purchase the replacement gear from your dealer and repair. 向經銷商購買新的齒輪後進行維修
Impossible semi-auto operation. (Single shot) 不能半自動操作	Insufficient battery power. 電池電量不足	Charge the battery. 給電池充電
	Faulty bullet feed of magazine. 彈倉裏的子彈裝錯	Repair clogging the magazine. 清理彈倉裏的堵塞物
Impossible semi-auto operation. (Single shot) 不能半自動操作	Poor electrical connection. 電線連接不好	Consult your dealer or us for overhaul maintenance or repair. 向經銷商查詢如何維修
	Deviation in gear timing. 齒輪調配偏離	Set to semi auto firing 5 to 6 rounds in full auto. 在全自動這一檔射擊5到6次後調到半自動檔

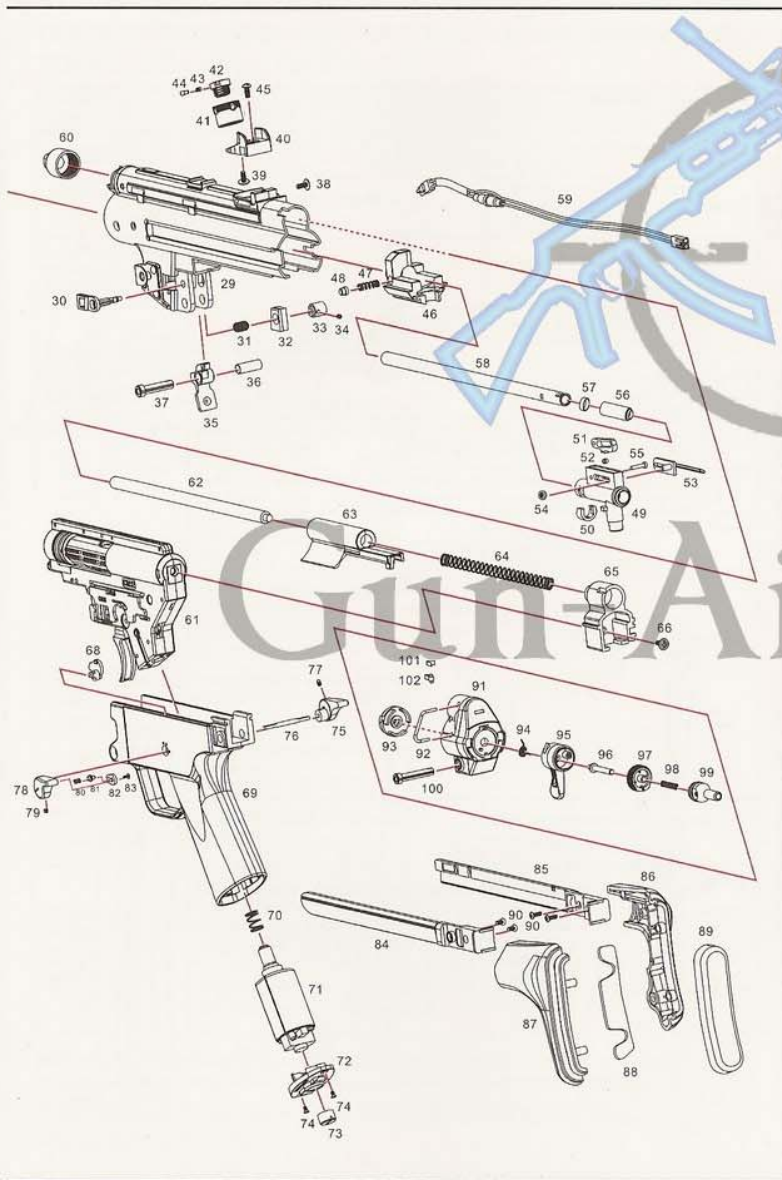

No.	DESIGNATION 名稱	No.	DESIGNATION 名稱
1	Outer barrel 消聲器外管	38	M3×6 PWMHO D=8mm M3×6 PWMHO D=8mm
2	Right block 消聲器卡件右	39	M3×5 PWMHO D=8mm M3×5 PWMHO D=8mm
3	Left block 消聲器卡件左	40	Gun sight base 後準星座
4	O-type ring 緊固“O”型圈	41	Rear target sight 後準星
5	Silencer inner barrel 消聲器內管	42	Gun sight pole 準星螺柱
6	Front cap 消聲器前蓋	43	Gun sight clutch spring 準星離合壓簧
7	Silencer cotton 消音棉	44	Clutch 離合紙
8	Front gun sight base 前準星座	45	M3×6 TMHO M3×6 TMHO
9	Front gun sight's metal slice 前準星鐵片	46	Hop up fixed base 過祇固定座
10	Front gallus hook 前背帶環	47	Only for spring 限位釘壓簧
11	M3×6 Screw M3×6鑽力	48	Hop up base limited nail 過祇座限位釘
12	M3×8 PWMHO D=7.5 M3×8 PWMHO D=7.5	49	HOP-UP 過祇
13	M3×10 KMHO M3×10 KMHO	50	Copper barrel block 銅管卡祇
14	Gun tip barrel 槍頭管	51	Rubber selector 橡膠調節片
15	Fixed shaft spring 拉簧定位鐵軸	52	Column rubber 圓柱橡膠
16	Loading pulling slice 上膛拉祇	53	Adjustable driving strip 調節傳動條
17	Loading cocking lever 上膛拉杆	54	Ø2.0×4 PWBHO D=5 Ø2.0×4 PWBHO D=5
18	Returning spring of lever cock 拉杆回位拉簧	55	Nail 管正膠釘
19	M3×8 PMHO M3×8 PMHO	56	Hop-up rubber 過祇橡膠
20	Ø2×14 spring pin Ø2×14彈簧銷	57	Copper 銅套
21	M3×6 KMHO M3×6 KMHO	58	Inner barrel 槍內管
22	Bullets tossed cover buffer spring coil 拋彈蓋緩衝簧	59	Power cable 電源綫
23	Trachea left 導管右	60	Fixed barrel (aluminium) 固定鉛管
24	Trachea right 導管左	61	Gear box 保箱
25	Rubber 扣祇橡膠	62	Spring's fixed pole 拉杆簧管正杆
26	M3 Hexagonal nut M3六角螺母	63	Bullets tossed cover 拋彈蓋
27	M3×29 PMHO M3×29 PMHO	64	Cocking lever spring 上膛拉杆簧
28	Ø2.6×8 PBHO Ø2.6×8 PBHO	65	Gun body rear base 主體後座
29	Gun body 主體	66	M5×13 TMHO inner hexagon M5×13 TMHO內六角
30	Safety fastener 保險扣件	67	Protect a box of line 保箱電綫
31	Safety return spring 保險回位壓簧	68	Location plectrum 定位拔祇
32	Safety sliding key 保險滑動鍵	69	Gun grip 手把
33	Safety button 保險按鍵	70	Motor spring 電機壓簧
34	M3×3 Screw M3×3鑽力	71	Motor 電機
35	Magazine safety 彈盒保險	72	Motor cap 電機蓋
36	Magazine tract 彈盒保險管正銅管	73	Motor adjustable screw 電機調節螺絲
37	Safety pipe 保險管正柱	74	Ø3×8 KTHO Ø3×8 KTHO